



# Lumio Cam

## QUICK START GUIDE

Indicates how many photos can be taken or how long video can be recorded

Photo and Video Resolution with Aspect indicator

Battery Indicator

Exposure Wheel

Turn Left to lower exposure.  
Turn Right to raise exposure.  
Double tap to set back default.  
Single tap for Manual Exposure\*

Start / Stop Video Recording

Playback

Opens gallery to playback your photos and videos.

Shutter

Press to take photo. In Continuous Shooting mode it takes picture until you release the button.

Multi Controller

Menu/OK opens the Settings.  
Arrow buttons can be used to set White Balance, Flash, Focus Mode and Drive Mode.

Display Modes

Press the button to show/hide on screen display elements.

Tap on screen

Short tap triggers Touch Focus Mode.  
Long tap over Level Tool calibrates it.

On Screen Display Elements

Show current mode for Flash, WB, Exposure Comp., Drive and Focus.

Fn Button

Configurable Function Button.  
You can assign function in Settings.

